

# IMPORTANT INFORMATION



# ***FLASHING SIGN SYSTEMS***

***START HERE***

***To Configure your Remote  
Activation Fob!***

**Your guide to Installing a Flashing Sign  
System Activation Fob**

**COVERS ASSEMBLIES:**

**M75-SABRA-0000**


**M75-SABRA-000W**

## ⌋Activation Fob Intro to Operation⌋

The device you are getting ready to use (some call it a Fob, Remote, or activation trigger) is intended to work in conjunction with a Flashing Sign Controller, and potentially Collaborators (constituting a “system”).

When pressed within 900 Feet (274m) of the system, the Standard M75-SABRA-0000 Fob will manually activate the normal flashing of the connected system’s LED signs for the configured duration. The signs will continue to flash for the configured duration after the button press.

When pressed within 900 Feet (274m) of the system, the Standard M75-SABRA-000W Fob will remotely reset the wi-fi network on any nearby Flash Sign Controller. Bear in mind, this will reset EVERY controller within range; if there are multiple systems around, you may notice several wi-fi networks become available.

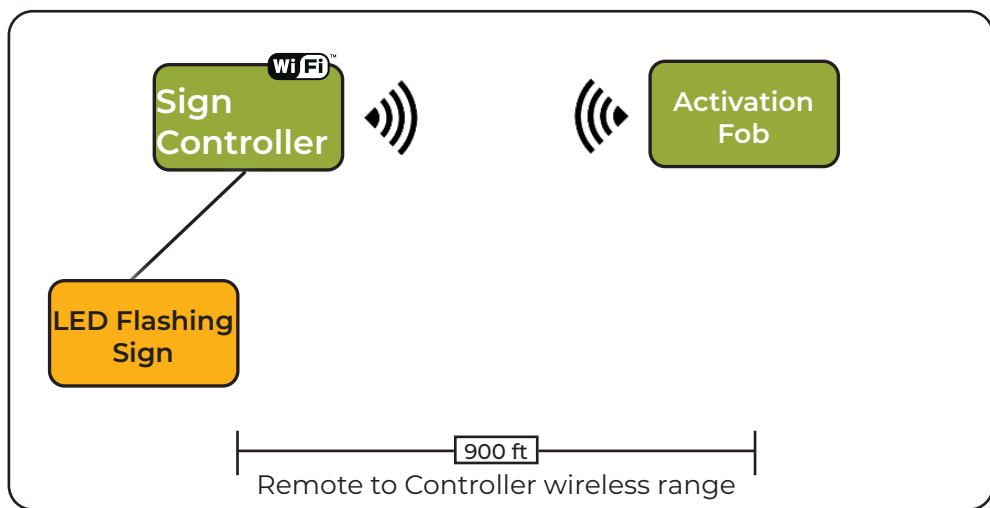

### ***Configuring and Using the M75-SABRA-000W Wi-Fi Reset Fob***

The Wi-Fi reset fob does not require configuration. Simply install the batteries and it will function within moments of power on.

While near a TrafficCalm Flashing Sign Controller, press the button. Within a max of 3 minutes, the Controller’s wi-fi network can be connected to. The network will remain active for 2 hours. After 2 hours, just press the button again!

## (M75-SABRA-0000 Configuration)

To set up the activation fob, the device needs to be added to the system as a collaborator. The configuration process is covered in the manual included with your Flashing Sign Controller, but we'll cover specific details relevant to the remote here. See below for using the Wi-Fi fob.

Insert batteries into the Fob, but **DON'T** push the button

### Add the Fob as a Collaborator

In the image at left, you'll see the Collaborator ID of the fob(s). Input that ID(s) as any of the Collaborators in the Collaborator Setup screen in the wizard (shown at right)

### Complete the Configuration Wizard

### Test the Fob (push the button)

### Remove the Fob(s)

This part may seem a little awkward, but it is necessary. In the configuration wizard, select Setup from the drop down menu

Proceed to the Collaboration Setup screen, and press the

**big red X** next to the Fob's collaborator ID. This will exclude the Fob from the Controllers periodic communication, but still allow it to activate the system. This saves a bunch of battery power, so don't neglect it!

TRAFFICALM  
SYSTEMS

### Collaboration Setup

Enter the 6 character code from each collaborator that you want to be part of the controller's group

Collaborator 1  
ex. 0B4654

Collaborator 2  
ex. 0B4654 **X**

+ Add Collaborator

### Troubleshooting The M75-SABRA-0000

If the Fob's button is pressed for too long, it will reset the device to factory default. Simply remove the batteries for 10 seconds, replace them, and perform the setup detailed above.

If the unit still does not perform given that attempt, replace the batteries.

# <Warranty Statement>

TraffiCalm Systems provides the following warranty for its traffic calming solutions whether sold directly by TraffiCalm or by an authorized TraffiCalm distribution partner.

- TraffiCalm Systems warrants this product, excluding batteries, will be free of defect in materials and workmanship for a period of five (5) years beginning on the day the end user receives the product. Warranty is only valid if the product is ineffective for its intended purpose due to defects in materials or workmanship.
- Warranty is only valid if the product is installed, operated and maintained in accordance with the manufacturer's instructions and recommendations (available upon request).
- TraffiCalm's sole responsibility, and the purchaser's and users' exclusive remedy, shall be that TraffiCalm will either repair or furnish replacements for defective parts.
- Replacement parts will carry the unexpired warranty of the parts they replace. Any repairs conducted on out-of-warranty items will carry a 90 day warranty.
- Claims made under this warranty will be honored only if TraffiCalm is notified of a failure within the warranty period, reasonable information requested by TraffiCalm is provided, and TraffiCalm is permitted to verify the cause of the failure.
- TraffiCalm assumes no liability for any incidental or consequential damages, in any way related to the product regardless of the legal theory on which the claim is based.
- TraffiCalm Flashing Sign Systems are designed, tested, and warranted to operate as a matched component system. The warranty is voided if all system components for controllers, collaborators, and LED rings are not TraffiCalm equipment and third party devices are substituted without prior written approval from TraffiCalm.

This warranty does not cover damage resulting from:

- Accidents, vandalism, impact with a foreign object, or acts of God.
- Product modifications made by someone not authorized by TraffiCalm
- Failure of Customer to follow TraffiCalm's published operating instructions,
- Failure to follow TraffiCalm's published site selection and installation instructions,
- Removal or relocation of the unit,
- Electrical work external to the unit, virus/hacker activity, and external computer errors.

THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY.

For Any Further Assistance Please Call  
our Technical Service Department at:  
855-738-2722 or visit [trafficalm.com](http://trafficalm.com)