
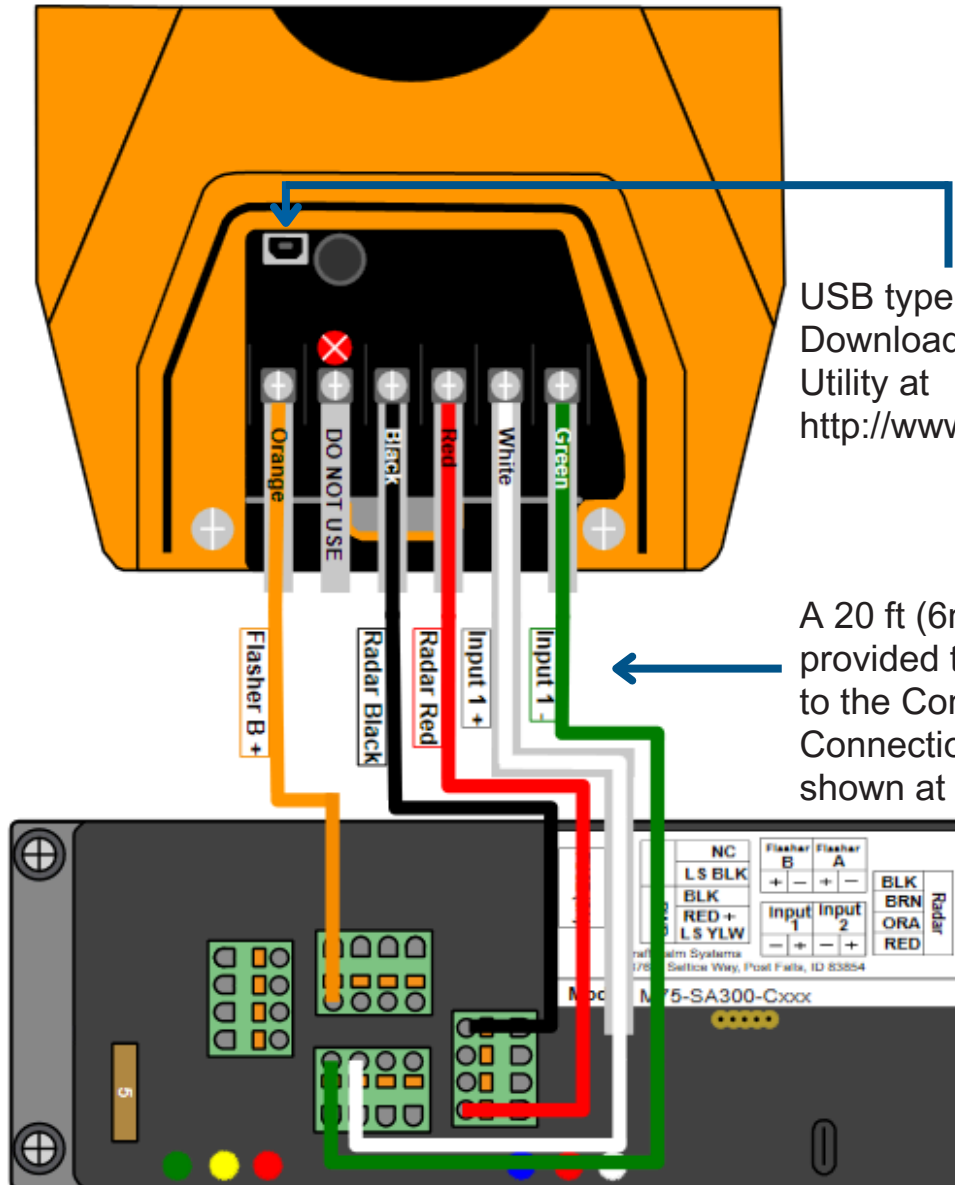


Campbell Guardian Station Quick Guide

Please refer to Campbell's documentation (available at <http://www.pedsafety.com/product-installation-guides/>) for details regarding push button use and configuration. The reverse of this document serves as a template for drilling the supporting post to accommodate installation of the push button

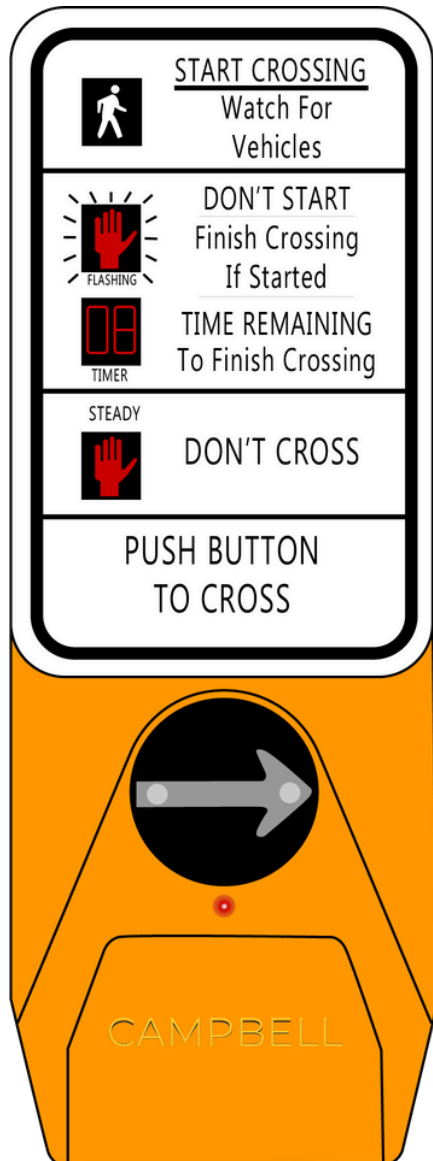


USB type B Port for Configuration
Download the Campbell PedConnex
Utility at
<http://www.pedsafety.com/downloads/>

A 20 ft (6m) extension cable is
provided to connect the push button
to the Controller or Collaborator.
Connections should be made as
shown at left



use "Actual size" setting.

Note: When printing this PDF

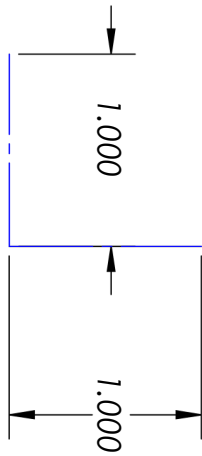


Measure above at 1" to ensure 1:1 scale

Guardian/WIAAPS Base Station

Campbell Company

8.500

6.500

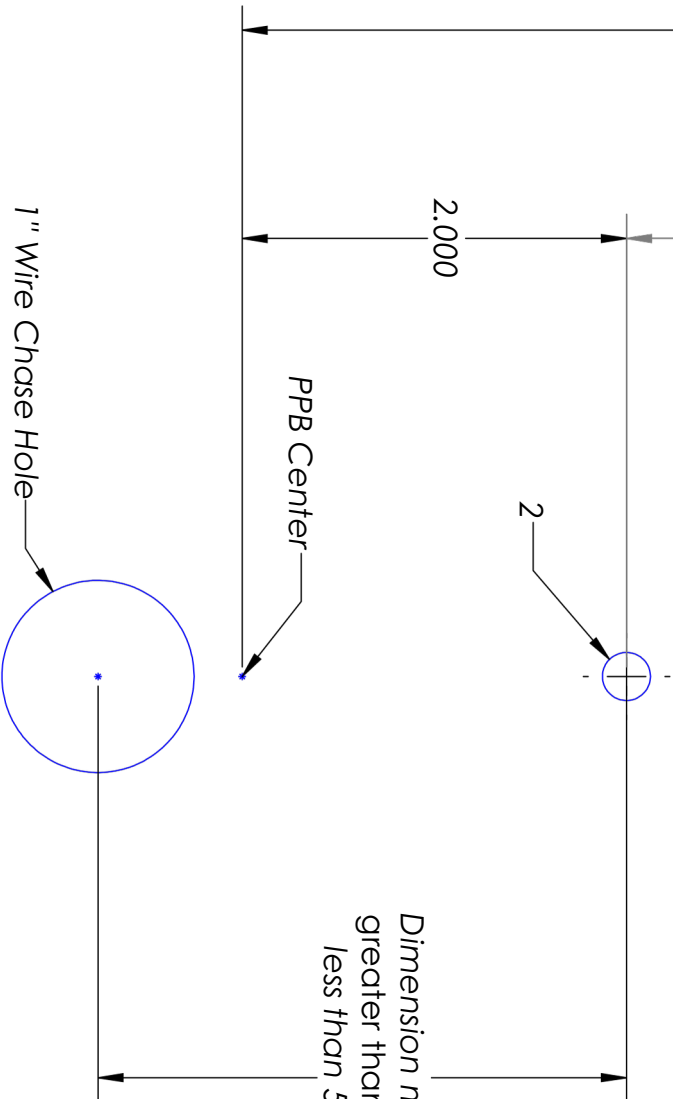

1. Drill holes 1 and 2 with #7 ($\Phi .201"$) bit
2. Tap holes 1 and 2 with 1/4-20 tap
3. 1" wire chase hole may be located between 2.250" and 5.625" below hole 2.

Dimension must be greater than 2.250", less than 5.625".